

ADJUSTING ELEVATOR TRIM


Troubleshooting:

If you are having trouble flying your CC Flyer, please follow these simple trim adjustments that will get you flying in no time.

1. Before you launch your airplane, first make sure the horizontal tail is straight and level (Diagram A)
2. If when you hand launch, the airplane either does not take off or keeps losing altitude, bend the horizontal tail upwards (Diagram B)
3. Never put the horizontal tail in the down position (Diagram C). Your airplane will not fly with the tail in this position.

IMPORTANT TIPS:

- Make sure battery is completely discharged/drained before attempting to recharge. If battery is not completely drained, the battery will overheat and may cause severe damage.
- Always allow battery to cool completely before attempting to recharge
- Always monitor the charging process. As soon as the battery becomes warm to the touch, disconnect from the charger.

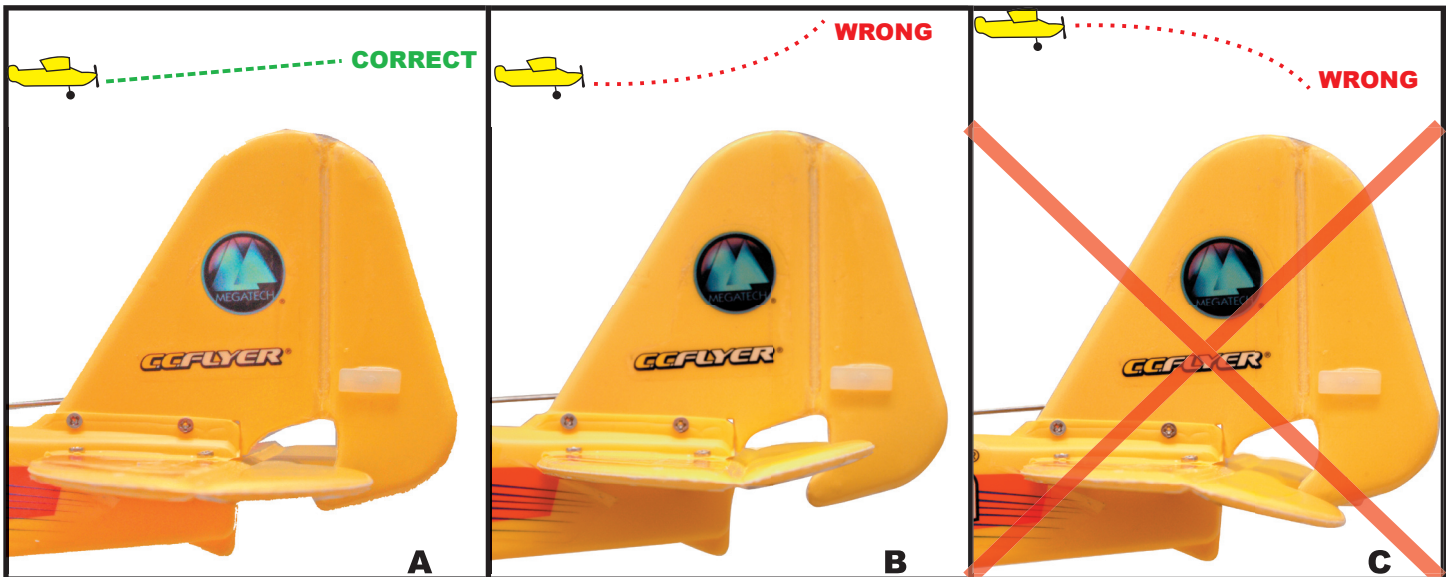

**PLEASE READ YOUR ENTIRE OWNER'S MANUAL
FOR MORE FLIGHT TIPS & ADJUSTMENTS.**